BBK PERFORMANCE LLC / For any questions, email us: 3060 Performance Circle / TECH@BBKPERFORMANCE.COM Deland, FL 32724 /



INSTALLATION INSTRUCTIONS - INSO67

FIREWALL CLUTCH CABLE ADJUSTER

Part # 15050 // 1979 - 2004 Ford Mustang applications




 
SPECIAL TOOLS REQUIRED: None.



INSTALL TIME: Approximately 1 hour.

DIFFICULTY: Easy.

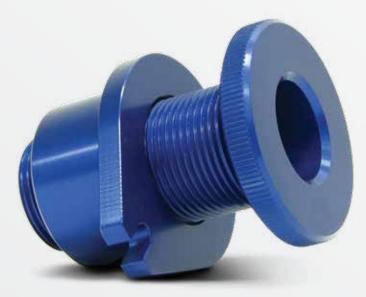



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019





FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 1



BBK PERFORMANCE LLC / For any questions, email us:

TECH@BBKPERFORMANCE.COM

3060 Performance Circle

Deland, FL 32724





Working from under the vehicle, remove clutch cable from the clutch fork.

STEP 2



Working from under the dashboard, remove the clutch cable from the quadrant assembly.

STEP 3



Working from under the hood, remove the sheetmetal screw attaching the clutch cable housing to the firewall. Once removed, simply pull the housing and exposed cable from the opening in the firewall.

STEP 4

Remove the large, black rubber isolator from the clutch cable housing end where it was attached to the firewall, then slide the knurled portion of the adjuster over the cable, onto the opening in the firewall.

FF 🕒 🛗 🮯

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 5



BBK PERFORMANCE LLC / For any questions, email us:

3060 Performance Circle Deland, FL 32724 / TECH@BBKPERFORMANCE.COM

Make sure the adjuster body is threaded completely onto the knurled portion of the adjuster, then insert the complete assembly into the firewall. Line up the screw hole to the notch and reinstall screw.

STEP 6 (CONT.)







Reattach the cable to the quadrant assembly first, then to the clutch fork. To adjust the cable, simply twist the knurled adjuster either cw or ccw to loosen or tighten cable.

FF 🕒 🛗 🮯



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

