

**INSTALLATION INSTRUCTIONS - INS226** 

# THROTTLE BODY

Part # 1806 and 1807 // 2015-2017 Ford Mustang GT 5.0L V8 // 85 & 90mm



**Special Tools required:** No special tools required.




Install Time: Approximately 1 hour.



Difficulty: Easy.

This part will only fit 2015-2017 models - see part# 1940/1941 for 2018 and up.

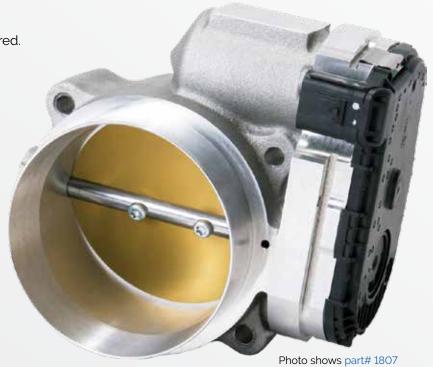

- spacer NOT required or supplied with part# 1806



Please follow the ECU re-learn procedure on page 3 before driving on the road.



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle.

BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.





# FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

## STEP 1



Remove the (3) pin screws that hold the battery cover to the chassis. Disconnect the negative battery terminal.

## STEP 3





Disconnect the sound tube and the (3) smaller plastic breather hoses from the air inlet tube.

# STEP 2



Remove the engine cover by pulling up on it to release its mounting pins from the grommets on the intake manifold.

# STEP 4



Loosen the (2) clamps on the air inlet tube at the air box and throttle body. And remove the air tube from the vehicle.

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.






# FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

## STEP 5



Remove the four mounting bolts from the stock throttle body, as you remove the throttle body flip it to unplug the motor plug on the bottom.

#### STEP 6

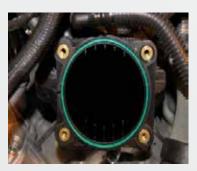




Wipe off the stock rubber throttle body gasket to remove any oil or debris. You will be reusing this gasket. Connect the motor plug to the BBK manifold. Use the supplied bolts to secure the throttle body to the intake manifold.

## STEP 6 (CONT.)

NOTE: for part # 1807 you will need to use the throttle body spacer supplied in the kit. The spacer will go in between the intake manifold and the throttle body. On the spacer be sure to face the side with the rubber O-ring towards the backside of the throttle body for proper

## STEP 7

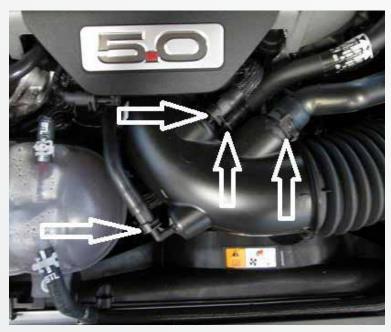

Re-install the air inlet tube and reconnect the sound tube and the (3) breather tubes. Tighten down the (2) band clamps.

# STEP 8

Re-install the engine decorative cover, the strut tower brace if applicable and reconnect the negative battery terminal and install the battery cover.

■MADE IN U.S.A.■

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle.

BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.



BBK PERFORMANCE LLC / For any questions, email us: 3060 Performance Circle Deland, FL 32724 / TECH@BBKPERFORMANCE.COM



## FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

#### **ENGINE RELEARN PROCESS**

Because your vehicles engine is electronically controlled by a computer, some control conditions are maintained by power from the battery. When the battery is disconnected or a new battery is installed, the engine must relearn its idle and fuel trim strategy for optimum drive ability and performance.

#### STFP1

With the vehicle at a complete stop, set the parking break

#### STEP 2

Put the gearshift in P (Park) (automatic transmission or the neutral position (manual transmission), turn of all accessories and start the engine.

## STEP 3

Run the engine until it reaches normal operating temperature. Approximately 4-5 minutes.

## STEP 4

Allow the engine to idle for at least one minute.

### STEP 5

Turn the A/C on and allow the engine to idle for at least one minute.

#### STEP 6

Drive the vehicle to complete the relearning process.

- The vehicle may need to be driven 10 miles or more to relearn the idle and fuel trim strategy.
- If you do not allow the engine to relearn its idle trim, the idle quality of your vehicle may be adversely affected until the idle trim is eventually relearned.



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle.

BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

