

INSTALLATION INSTRUCTIONS - INS260

OIL SEPARATOR KIT

Part # 1931 // 2015 - 2017 Mustang V6



No Special Tools required



Install Time: Approximately 1 hour.



Difficulty: Easy



MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

STEP 1



This picture (Note) As the arrow shows this is the draw side of the oil separator. The hose that goes to the intake manifold will attach to this end.

STEP 2



Remove factory PCV hose then install Oil Separator Kit as shown in picture. Making sure the shorter hose goes to intake manifold/draw side.

STEP 3



STEP 4



Make sure to use supplied clamps at engine connections.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

BBK PERFORMANCE LLC
3060 Performance Circle
Deland, FL 32724

For any questions, email us:
TECH@BBKPERFORMANCE.COM



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

*WE RECOMMEND DRAINING OF AIR OIL SEPARATOR EVERY 1,000 MILES OR AS NEEDED;
THIS WILL OF COURSE DEPEND ON DRIVING CONDITIONS!*

For normal day to day driving check every 1,000 miles until a baseline is established. A good baseline is to drain the Air Oil Separator when it is about HALF full. This will vary with temperatures (cold winters vs. hot summers). Simply Unscrew the base of the oil separator – drain the oil and clean out the canister base. Once clean re-install and you are good to go for another 1000+ miles.

 MADE IN U.S.A. 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

W W W . B B K P E R F O R M A N C E . C O M

