

Installation Instructions

JLT 3.0 Oil Separator, Passenger Side

(2011-14 Mustang GT with Roush / VMP, Whipple or FRPP Supercharger;

2015-17 Mustang GT with Roush / VMP Supercharger)

#3020P

Please review complete instructions prior to installing

Remove the stock line from the valve cover, supercharger and hose fitting behind the reducer.



Insert JLT assembly into the hose and reinstall the clamp.



Connect fittings to the valve cover and supercharger and your done.



To properly clean the filter in the Oil Separator spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business. If you have any questions, please e-mail <u>info@JLTtruecoldair.com</u> or call 757-335-1940. Our hours are Monday-Friday, 8:00am = 5:00pm Fastern Time.

call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

<u>Warranty:</u> JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

<u>Disclaimer:</u> JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.

Page 1

2